




INNOMOUNT

MONTAGE-ANLEITUNG

Picatinny- und Multirail - für Mauser 25

Zielfernrohr und originale Montage demontieren.
Magazin und Verschluss entnehmen.

1

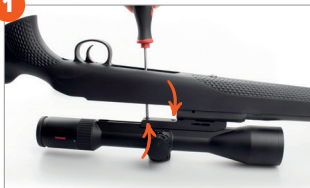

Waffe umdrehen und durch den Magazinschacht die beiden Schrauben (Torx T20) demontieren.

2



Waffe erneut umdrehen und durch Schlitz in der Montage die Schraube mit Hilfe eines langen Gegenstandes z.B. 2mm Inbusschlüssel, Durchschlag, ... (max. $\varnothing 2,6\text{mm}$) lösen, bis sich das Zielfernrohr entfernen lässt.

3



Beide Schrauben an der Oberseite der Montage entfernen (Inbus 4mm). Montage nach oben hin von der Waffe abheben.

4



Innogun Picatinny- oder Multirail montieren. Schiene auf die Waffe aufsetzen. Beide mitgelieferten Schrauben (M6x10, Torx T30) anbringen und festziehen (Drehmoment 6Nm).



www.innogun.com



INNOMOUNT

INSTALLATION MANUAL

Picatinny- and Multirail - for Mauser 25


Remove the scope and original mount.
Remove magazine and bolt.



1 Turn the gun upside down and remove both screws (Torx T20) through the magazin well.



2 Turn the gun again and unscrew the screw through the slot using a long object e.g. 2mm allen key, drift punch, ... (max. Ø2,6mm) until the scope can be removed.

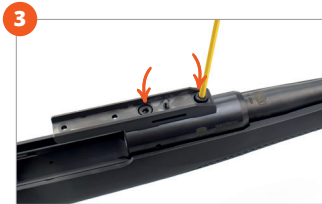

3 Remove both screws on top of the mount (4mm allen key).



4 Place the rail on top of the gun and screw it in place with the screws provided (M6x10, Torx T30). Use maximum torque of 6 Nm.



www.innogun.com